


## Self-cleaning detergent dispenser inside the door

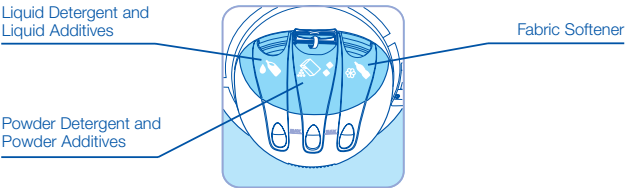

Please ensure that you load your detergent and fabric softener into the correct compartment; a detergent dosage cup is supplied with the machine for easy loading of detergents. As the detergent dispenser is inside the machine, cleaning of it will not be necessary, though it is easily removed. Check your user manual for instructions.

### Maximum detergent Indicator system



Avoid overdosing the machine with too much detergent. Fill only up to the MAX level indicated on the front of the dispenser. When adding detergent, check to make sure that the float level STOP indicators do not surpass the level of the loading grilles. **Do not use bleach.**

## 4 special programmes for quick selection

The Indesit Moon washing machine **automatically** controls temperatures, spin speed, and wash intensity. It optimizes water, time, and energy consumption based upon the quantity and types of laundry you load. All Moon programmes use special **sensors** which, if necessary, will prolong the rinse phase until your laundry is completely detergent-free.

TABLE OF WASH PROGRAMMES

If you are washing . . .	Programme	Temp	Programme duration	Spin	Max load
<b>White / Colourfast Cottons:</b> bedsheets, tablecloths, towels, etc.	<b>White Cotton</b>	60°	145 min. complete cycle	Max	Full (6 Kg)
<b>Non-Colourfast Cottons:</b> shirts, t-shirts, underwear, etc.	<b>Color Mix Easy Iron</b>	40°	105 min. complete cycle	1000	3/4 (4,5Kg)
<b>Synthetics:</b> shirts, t-shirts, underwear, etc.	<b>Color Mix Easy Iron</b>	40°	105 min. complete cycle	1000	Half (3Kg)
<b>Delicate cottons and synthetics</b>	<b>Daily Wash</b>	30°	Just 30 min.	800	Half (3Kg)
<b>Wool:</b> jumpers, scarves, etc.	<b>Delicates with spin</b>	30°	50 min. complete cycle	600	1/4 (1,5Kg)
<b>Silk and delicates:</b> lingerie, drapes, viscose, etc.	<b>Delicates without spin</b>	30°	50 min. complete cycle	no	1/4 (1,5Kg)
<b>Fast Wash 30</b>	<b>Daily Wash</b>	30°	Just 30 min.	800	Half (3Kg)
<b>Rinse Only</b>	<b>Cold Water Rinse</b>	Cold water	Just 30 min.	800	Half (3Kg)




Quick guide

moon

Indesit  
We work, you play.

Indesit  
We work, you play.

## The Control Panel Explained

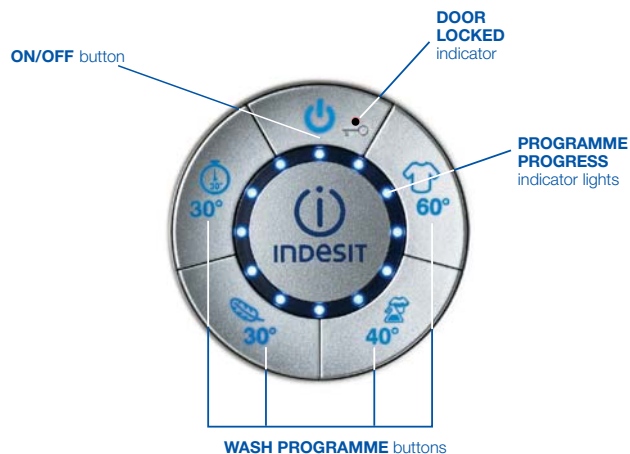

For Whites and Colourfast cottons.



For all colourfast cottons, and synthetics.  
Makes ironing fast and easy.




For all your wool and silk items.



30-minute Fast Wash for cottons or synthetics that need a freshen up or for those that have "30°C" labels. Also a Rinse Only function.


## Programme any wash cycle with ease

1. To turn on the washing machine select the  button. The "Wash Programme" buttons will light up.
2. Select a programme.  
**If you wish to select a delicate wash programme, please read the next page carefully.**
3. The "Wash Time" indicator lights will progressively light up during the wash cycle.
4. A beep will indicate when the wash programme has finished and all the indicator lights will blink.

## How to Pause or Cancel a wash programme

To **pause** a programme that has already started, simply press that same programme button. To restart the programme, press the button of the programme you wish to restart.





To **cancel** a programme, simply press the  button for a few seconds.

The  indicator light will blink for a few seconds while the washing machine empties out any remaining water.





**Always wait for the "Door Locked" indicator to switch off before you attempt to open the door.**

## Specialist programmes for all your needs


### Woollen items (with delicate spin cycle)

1. Press the  button.  
After approximately 3 seconds the  and the  symbols will start blinking.
2. Press the  button once more.  
When the wash cycle has finished, a **delicate spin cycle** will begin.


### Silk items (no spin cycle)

1. Press the  button.  
After approximately 3 seconds the  and the  symbols will start blinking.
2. Press the  button.  
There will be **no spin cycle** when the wash cycle has finished.

### Daily Programme

The daily 30-minute programme is for cottons or synthetics that are only slightly dirty and for items with "30°C" labels. Simply add detergent and press the  button. The Daily 30-minute programme will begin automatically.

### Rinse Only Programme

Special sensors detect if there is detergent on your clothing. If you have hand-washed some items and they are still soapy, simply load them into the washing machine without adding detergent. Press the  button. A RINSE ONLY PROGRAMME will begin automatically.